 


NORDIC Steamer

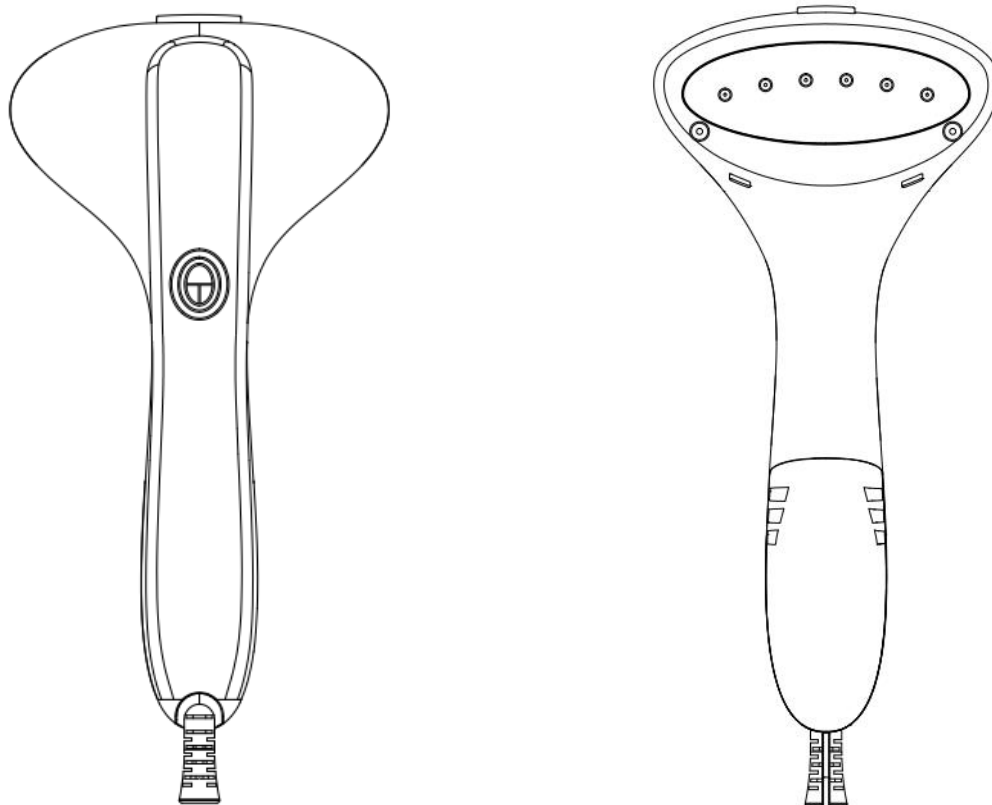

Please read the manual carefully before use.

Safety instructions

Please read the manual before using the steamer

Children and persons below the age of 18 should not operate the steamer.

Keep the steamer and its cord out of reach of children.

Children should not clean or maintain the steamer.

The steamer is not a toy

The steamer is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

Warning

1. Check if the voltage indicated on the power cord corresponds to the local mains voltage before you connect the steamer.
2. If the cord is damaged, it must be replaced by a service agent or a qualified person in order to avoid a hazard.
3. Unplug the steamer after use and before cleaning or during maintenance of the steamer.
4. Do not pull the power cord to remove the plug from the power outlet, always pull from the plug.
5. Do not leave the steamer unattended when plugged in the power outlet.
6. Do not add hot water in the water tank as it will be deformed.
7. After use, cut off the power and pour out the leftover water after the steamer is completely cooled down.
8. Do not place the steamer on a surface with the steamer head touching the surface while the steamer is hot or connected to power outlet
9. Please use distilled water.
10. Warning: Do not add perfume, water from tumble dryer, vinegar, magnetically treated water (e.g., Aqua+), starch, descaling agents, ironing aids, chemically descaled water or other chemicals as they may cause water spitting, brown staining or damage to your steamer.
11. Never immerse the steamer in water or any other liquid, nor rinse it under the tap.

Caution



1. Check the power cord regularly for possible damage.
2. Take care when using the steamer due to the emission of steam.
3. Steam and hot water can cause burns. The steamer head can become extremely hot and may cause burns if touched.
4. This steamer is intended for household use only.
5. Steam may damage or cause discoloration of certain wall or door finishes.
6. Do not use the steamer when the water tank is empty
7. Do not use your bare hand as a supporting surface when you steam. Pull the sides of the garment to stretch it. Do not place the steamer head on the power cord after use

Product Description


The design is minimalistic, lightweight and easy to use. By using a high-temperature steam you can smooth a variety of fabrics quickly, but also remove dust and some bacterias.

Nordic Steamer Box content

1. Nordic Steamer
2. Water Container
3. Fabric Brush

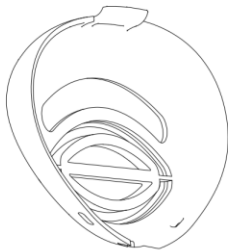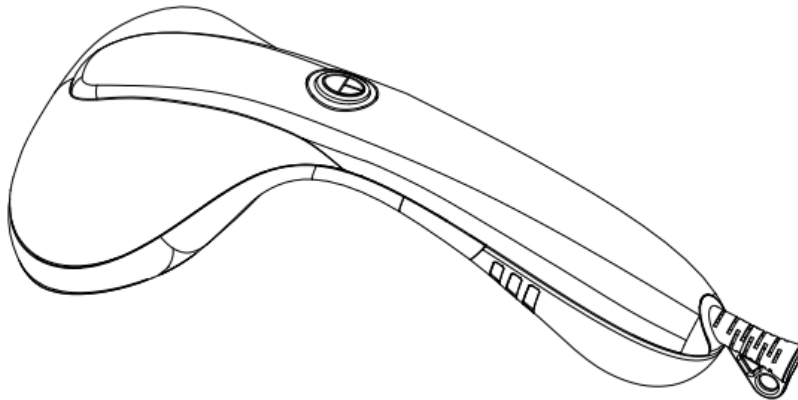



Fabric brush

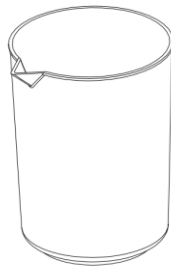

Water Container

Before you start using your Nordic Steamer

Remove the water container by pulling it in the opposite direction from the nozzle.
Remove the rubber plug on top of the container and fill it with distilled water as it will prevent mineral deposits in the steamer system.
Close the top again and put the container back into position.

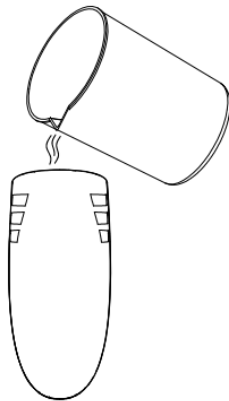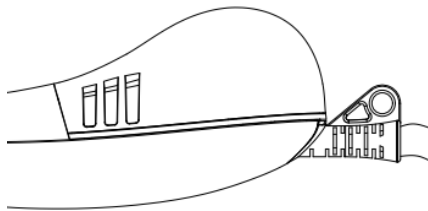

Using your Nordic Steamer

1. Turn on the steamer and the indicator lights red. After about 25 seconds the indicator turns off and it will indicate the right steam temperature has been reached. Press the steam button, which will turn green and the steam jets will begin. Do not press the steam button if the red light is on.
3. If the red light turns on while steaming, please wait a few seconds without pressing the button until the light turns off again. The steamer is now ready to use again.
4. When using the steamer for the first time, test steaming on an old cloth or similar as there might be dry powder sediment left in the steamer from the production process.
3. Steam your garment by hanging it on a hanger, pull lightly on it with one hand, and start steaming from the upper part with the other, press steam button, then move steam nozzle up and down.

The steamer is hot. Always point the steamer, so that the steam jets away from you. Do not use the steamer for more than 30 minutes continuously. If you wish to use it for more than 30 minutes, let the steamer cool off for one hour before using it again.

For garments with buttons such as shirts, jackets and pants, close the first button to help straighten the fabric. For shirt pockets, move the steamer head upwards while pressing against the fabric. To steam sleeves, start from the shoulder area and move the steamer head downwards. Steam while you pull the sleeve diagonally down with the other hand. For garment with collar, move the steamer horizontally along the collar. Note: The steamer can be used for creating a natural look and for quick touch-ups.

Keep the steamer head a slight distance away from dresses with frills, ruffles or sequins. Use only the steam to loosen the fabric. You can also steam from the inside.

The fabric brush attachment improves steam penetration to achieve faster and better steaming result on thick and heavy garment such as coat and jacket. The brush has to be used together with steam by pressing the steam trigger and slowly moving the bristles along the garment.

Note: Always unplug the steamer before you attach or detach the brush attachment. Be careful, the steamer head may still be hot.

After use

Always empty the water container after use, to prevent mineral deposits in the steamer system. Press steam button to empty the leftover water from the steam system. Rinse the water container to remove any deposits. Wipe any deposits off the steamer head with a damp cloth and a non-abrasive liquid cleaning agent.

Technical specification

Name of product: Handheld Garment steamer

Country of Origin: China

Model: 912883 / EM-602

Importer: Bonnier Publications

Rated Voltage: 220-240V~

Rated Frequency: 50Hz

Rated Power: 1500W

Certificate: CE/EMC/ROHS

Environment

Do not dispose appliances marked with the symbol; household waste. Return the product to your local recycling facility or contact your municipal office.

