User Manual of BT077

Product Parameters:

Bluetooth Version: V5.0

Support Profile: a2dp\avctp\avctp\avrcp\hfp\spp\smp\att\ap\aatt\rfcomm\sdp\\2cap profile

Working Distance Range: 10 M

Frequency Range: 2.402GHz-2.480GHz

Battery Specifications: 3.7V, 250mAh, Built-in rechargeable lithium battery

Charging Voltage: DC 5V

Charging Time: About 2 Hours

Talking/Music time: About 7 Hours

Items Included:

- 1. One foldable multifunction Bluetooth headphone "BT077"
- 2. One charging cable
- 3. One Aux-in cable
- 4. One User Manual

Button Description:

M: Three kinds of playback modes switch(TF Mode, Radio Mode, Bluetooth Mode)

() / ▶ | | / ↑ : ON/OFF Switch/Play or Pause Music/ Answer or Reject Calls

▶▶|/V+: Long press for next song or radio station/ Short press for increasing volume

I ◄ ◄/V-: Long press for previous song or radio station/ Short press for reducing volume

Bluetooth Function Description:

1) Pairing Operation:

a. For the first time pairing: Start up the Bluetooth headphone. It will boot into Bluetooth Mode automatically,

voice prompts "Bluetooth Mode", LED indicator light rapidly alternating flashes with blue and red colors. Please open the smart device's Bluetooth searching function, and select the device "BT077", no password required, after successful pairing, voice prompts "Connected", LED indicator light stays blue.

b. Re-pairing: Turn off the attached smart device's Bluetooth function, voice prompts "Disconnected", if can't search and pair with the last connected smart device within 3 seconds, the headphone will automatically re-enter pairing mode, voice prompts "Bluetooth Mode", LED indicator light rapidly alternating flashes with blue and red colors. Open another smart device's Bluetooth searching function, and select the device "B1077", no password required, after successful pairing, voice prompts "Connected", LED indicator light stays blue.

c. Follow-up pairing: Automatically pair the last connected device in 3 seconds after boot.

2) Answer Calls:

3) Hang up phone calls:

Short press (1) / ▶ | / ↑ after calling.

4) Reject Calls:

Long press () / ▶ | / 3.

5) Redial the last outgoing number:

Double-click (¹) / ▶ | / 3.

6) Music Play:

Short press (| / |) / |) after connected with the smart device.

Micro SD Card playback Mode:

- 1) When the slot is empty, inserted the Micro SD Card, voice prompts "TF Mode". Then it plays media automatically.
- 2) When the Micro SD Card is inside, switch to TF Mode through "M".

FM Radio Mode:

- 1) When the headphone is on, switch to FM mode through "M", voice prompts "Radio Mode".
- 2) Usage Tips: Short press "(b/|| /||)" to search and save stations automatically (It can be abort with

another short press while searching). Once enter FM mode again, it will play the first saved radio station automatically. If you want to re-scan, short press" ($\frac{1}{2}$) / $\frac{1}{2}$ " again in the Radio mode.

Line-in Mode:

When the headphone is on, insert the Line-in cable, voice prompts "Line-in Mode". Then it plays smart device's media automatically.

- 1. Maximum volume warning voice prompts "du du".
- 2. Supports MP3, WAV, WMA format playback.
- 3. Battery indication on IOS.
- 4. Micro USB as common use charging port.

LED indicator light Status:

Charge Status	Steady red LED. When fully charged, the LED indicator light turns off.
Power on Status	Blue LED indicator light turns on.
Power off Status	LED indicator light turns off.
Pairing Status	Blue and Red LED indicator lights rapidly alternating flash.
Standby Status	Blue LED indicator light turns on.
Connected Status	Blue LED indicator light turns on.
Using Status	Bluetooth Mode, Blue LED indicator light flashes every two seconds.
	Radio Mode, red LED indicator light turns on.
	TF Mode, red LED indicator light flashes every three seconds.
	AUX-in Mode, the headset automatically turns off, LED light goes out.

Note:

If no pairing connection after the Bluetooth headphone enters the pairing mode, please turn off the headphone as for power savina.

 
Do not perform other operations when searching Bluetooth to prevent the program error.

Please select the appropriate volume in use to prevent damage to your ears.

Please note that a good environment while using the Bluetooth headphone can avoid damage to the headphone.

Please charging the headphone after a long time none-use.

- 1 ----- Mode Button
- 2 ----- Power Switch
- 3 ----- Up Button
- 4 ----- Down Button
- (5) ----- 3 5 Line-in
- 6 ----- Micro-USB
- 7 ----- Blue/red LED
- 8 ----- The Microphone
- (9) ----- TF card







Do not dispose appliances marked with the symbol; household waste. Return the product to your local recycling facility or contact your municipal office